# HAFELE



FREE LIFT SYSTEMS



www hafeleindia com

HAFELE HÄFELE

# **NEW FREEDOM IN** MOTION. FREE.

LIFT SYSTEMS BY HAFELE



# THE ELEGANCE OF OPENING. FLAPS FOR MAXIMUM FREEDOM IN MOTION. ENGINEERED BY HÄFELE.

The fittings of the Free family give flaps new freedom in movement. This opens up more opportunities in the visual and technical design of furniture and has tangible benefits compared to hinged doors. But above all, it gives the furniture and the room undreamt elegance and lightness. It doesn't matter whether a flap is lifted, tilted, swivelled, or folded - it immediately provides added value and more efficiency when working.

Almost 100 years of experience with furniture fittings, engineering expertise, and a close connection to the market and the people who work with furniture fittings on a daily basis led to the development of this product family. Inspired by the requirements of the market of tomorrow, the Free family fulfils the demands for creative freedom, choice of material, design, ease of installation and convenient operation on a whole new level. Having cycle tested for 80,000 times, these systems meet and even exceed the LGA certification requirements. To put it simply: They are slimmer (with regard to design), lighter (to operate) and simpler (to install).











# ELEGANT MOTION IN THE ROOM.



HINGE AND LID STAY IN ONE.





MAXIMUM ACCESS
TO THE CABINET.



### FREE LIFT SYSTEMS

More Design Freedom. More Application Possibilities.

Large fronts need a lot of room to move using conventional types of opening. The Free lift systems vary the flap opening geometry in a creative way. So that the type of opening is geared to the amount of available space or is suitable for the intended application.

### Free flap 1.7 / Free flap 3.15



- > Häfele Free flap 1.7: Extremely suitable for small to medium-sized flaps
- > Häfele Free flap 3.15: Extremely suitable for large, heavy flaps in wall units
- > Featherlight opening
- > Hinge connection not required

### Free swing

Free Lift Systems



- > Ideal for large, one-piece front panels
- > Swivels around cornice profiles and surface mounted lights
- > Cabinet contents are extremely easy to access
- > Cross bar can be shortened to individual cabinet

### Free fold



- > Ideal for high wall units with large front panels
- > Handle is always easily accessible, even with high front panels
- > Minimal space required inside the room
- > Material combination possible in the front panel
- > Finger-safe thanks to patented finger protection of the connecting hinge

### Free up



- > Ideal for larder units or wall units with front panels above
- > Also optimally suited for cabinets with cornices or side panels
- > Cross bar can be shortened to individual cabinet widths

Make the process of ordering your Free Lift Systems Scan this QR code to download the mobile application and easy and faultless with the Hafele Configurator.



Log in/Sign Up to access the Free Family Configurator.





Then simply enter the specifications as directed by the interface to receive the list of article numbers you would need to order as per your unique requirements.

# FREE LIFT SYSTEMS


**SLIMMER**: Space-saving Design



Free lift systems combine hinge and lid stay into one unit - this reduces not just the amount of space that the hardware requires in the cabinet but it also looks significantly more elegant. More room, due to the slimline, discreet fittings, increases the amount of usable space in the cabinet interior. The consistent development of the 3-spring system and the motion geometry of the fittings has resulted in a slimmer construction of the housing.



Only 288 mm wide and 25.5 mm slim



Free up: Only 277 mm wide and 25.5 mm slim



Only 273 mm wide and 25.5 mm slim (without arm)

2.6 www.hafeleindia.com www.hafeleindia.com

# HAFELE

### FREE LIFT SYSTEMS

LIGHTER: Easier Operations With Comfort

The main focus while developing the range was on providing maximum ease to the user. With the Free Lift Systems, Häfele has created new standards. The range turns opening and closing a cabinet into an experience.



### 1. FEATHER-LIGHT MOVEMENT

The flaps can be moved with a minimum amount of effort while opening or closing. This is possible even with heavy flaps.



### 2. SOFT OPENING AND CLOSING

Undampened stops are a thing of the past. The final movement of the flaps is soft and silent in both directions.



### 3. MULTI-POSITION STOP

Free Lift Systems

The flaps are held reliably in any position, regardless of the flap weight, making the handle reachable at all times.



# 4. CONVENIENT OPENING AND CLOSING

Electric motion support by Free E-Drive for maximum operating convenience.

If required or necessary the flaps can always be operated manually.



### 5. PUSH-TO-OPEN

For front panels without handles - applying a slight pressure on the bottom of the front opens the flap slightly (in case of Free flap 1.7 and 3.15)



### 6. SAFETY-STOP (In Case of Free Fold)

The center hinges that connect the two parts of the Free fold flap feature a quick-release finger protection that prevents your fingers from getting caught or crushed .



## **FREE LIFT SYSTEMS**

**SIMPLER**: Quicker Installation Saves Time

An impressive advantage of the Free family is its globally unique simple and quick installation. From one-handed installation and screw fixing of the fittings to clip-on mounting of the flaps, all working steps are optimized in such a way that the fitter saves a noticeable amount of time - for more efficiency.



DRILLING TEMPLATES:

Precise locating of the drill holes is made easier using the paper template provided with each fitting



UNIQUE BUILT-IN POSITIONING PINS: For installing the fitting with a secure hold.



GLOBALLY UNIQUE: Can be installed with one hand.



SYMMETRICAL SCREW-ON BRACKETS: For torsion-free fixing.



INSTALLATION WITH CLIP-ON SYSTEM:

www.hafeleindia.com

Flap mounting is simple and secure. Dismantling is also done without tools.



CONVENIENT ADJUSTMENT:

Accurate weight balancing of the front panel is achieved using simple access from the front. The same applies to achieve the optimum gap pattern via the three-dimensional adjustments.



### FREE FLAP 1.7 / 3.15



- > Hinge-less stay flap fittings: The two models Free flap 1.7 and 3.15 are designed for all of the most common cabinet height and flap weight combinations
- > Pleasant operating experience even with heavy flaps
- > Stylish and compact design makes the cabinet interiors easy to access, and allows the fitting to be used even in furniture with low depth (starting at only 109 mm)
- > For front panels made from wood, glass or with aluminium frame
- > Common mechanism to achieve Soft Close or Push-to Open
- > Adaptable E-Drive for an electrically operated comfort solution
- > Cover caps for Free Flap 3.15 are also suitable for installation with Free Flap 1.7 to provide a harmonious look in cabinet interiors
- > Extremely suitable for installation in combination with cornices
- > Easy, practical and time-saving installation process

### **Technical Specifications**

Free Lift Systems



Area of application: For stay flap front panels with or

without handle (push-to-open)

Material: Fitting: Steel, Cover cap: Plastic Finish/colour: Fitting: Nickel plated, Cover cap:

Grey, white or anthracite

200-450 mm (1.7) / 350-650 mm > For cabinet height:

(3.15)

> Min. cabinet depth: 109 mm (1.7) / 132 mm (3.15)

90° or 107° (In 1.7, opening angle of > Opening angle: 90° can be achieved by adding an

optional opening angle restraint; in

3.15 the angles are adjustable on the fitting)

> Adjustment facility:

Height/lateral/ tilting angle of front panel ±1.5 mm, Weight balancing of


front panel

> Installation: Fitting: for screw fixing on pre-

drilled side panel with pre-mounted Euro screws and built-in positioning pins, Front Panel: Tool-free assembly (clip system) onto pre-mounted screw-on brackets of the mechanism

arms


# **Quick Fixing System**

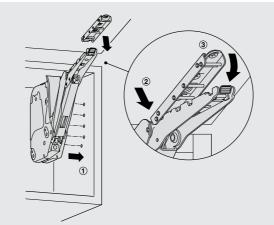

1) Fit the lift mechanism in place onto the pre-drilled side panel with the help of the built-in positioning pins and tighten the pre-mounted Euro screws

2-3 Fit and engage the front panel onto the Free Flap arm

### **Ease of Adjustment**

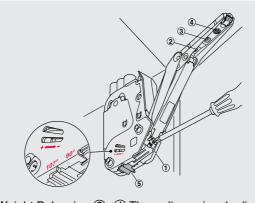

1 Weight Balancing 2-4 Three dimensional adjustments to achieve optimum gap pattern – ② Height Adjustment: +/- 1.5 mm 3 Lateral Adjustment: +/- 1.5 mm 4 Tilt Adjustment: +/-1.5° ⑤ Built-in Opening Angle Stop (only for Free Flap 3.15)

www.hafeleindia.com

### FREE FLAP 1.7 / 3.15

### Product Specification



# **FREE FLAP 1.7**

**FREE FLAP 3.15** 

www.hafeleindia.com

- 1a Free Flap 1.7 Lift System 2 Front Fixing Brackets
- 3a Cover Caps for Free Flap 1.7
- 4 Opening Angle Stop
- 1b Free Flap 3.15 Lift System
- 2 Front Fixing Brackets
- 3b Cover Caps for Free Flap 3.15

### Mechanism Selection Table as Per Flap Weight (including handle)

Oakinat Haiat I	F	REE FLAP 1	.7	FREE FLAP 3.15			
Cabinet Height (in mm)	Α	В	С	D	E	F	G
(			F	ront Panel Weig	ıht (in Kg)		
200	1.7–4.6	3.6–7.9	6.8–14.7				
225	1.5–4.1	3.1–7.1	6.0–13.1				
250	1.3–3.8	2.9-6.4	5.4-11.8				
275	1.2–3.3	2.5–5.7	4.8–10.6				
300	1.1–3.1	2.4-5.1	4.4–9.6				
325	1.0-2.8	2.1-4.6	4.0-8.8				
350	0.9–2.6	2.0-4.2	3.7–8.1	5.2-11.0	6.7–14.3	10.1–21	13.5–27.3
375	0.9–2.3	1.9–3.8	3.5–7.5	4.9–10.2	6.3–13.1	9.4–19.8	12.5–25.2
400	0.8–2.1	1.7–3.6	3.2-7.0	4.7–9.6	5.9-12.4	8.9–18.6	11.8–23.3
425	0.7–1.9	1.5–3.4	2.9–6.5	4.4–9.0	5.6–11.6	8.3–17.4	11.0–21.8
450	0.6–1.7	1.4-3.2	2.7–6.1	4.1–8.4	5.2-10.9	7.8–16.3	10.4–20.5
475				3.9–8.0	4.9–10.3	7.4–15.4	9.8–19.3
500				3.7–7.5	4.7–9.7	7.0–14.6	9.2–18.3
525				3.5–7.1	4.4–9.2	6.6–13.9	8.8–17.3
550				3.3–6.8	4.2-8.8	6.3–13.2	8.3–16.5
575				3.2-6.5	4.0-8.4	6.0–12.5	8.0–15.6
600				3.0-6.2	3.8-8.0	5.7–12.0	7.6–15.0
625				2.8–5.9	3.6–7.6	5.4–11.5	7.2–14.4
650				2.6–5.6	3.4–7.3	5.3–11.0	6.9–14.0

2.12

2.15

# FREE FLAP 1.7 / 3.15

### **Ordering Information**

### **Standard Configuration Sets and Components**



FREE FLAP 1.7 SETS*					
Model	Article No.				
Α	372.38.151				
В	372.38.152				
С	372.38.153				

\*Consist of: Free Flap 1.7 Lift Mechanism - Left and Right, 2 Front Fixing Brackets for Wooden Front Panels or Front Panels with Wide Aluminium Frame (Min. Frame Width: 45 mm) and Paper Template



FREE FLAP 3.15 SETS*				
Model	Article No.			
D	372.38.154			
E	372.38.155			
F	372.38.156			
G	372.38.157			

\*Consist of: Free Flap 3.15 Lift Mechanism - Left and Right, 2 Front Fixing Brackets for Wooden Front Panels or Front Panels with Wide Aluminium Frame (Min. Frame Width: 45 mm) and Paper Template



Free Lift Systems





Cover Caps						
Free Flap System	Anthracite	Grey	White			
1.7	372.38.158	372.38.159	372.38.160			
3.5	372.38.161	372.38.162	372.38.163			
			Unit: 1 Pair			

Note: Cover caps for Free Flap 3.15 are also suitable for installation with Free Flap 1.7




Narrow Alum Adap	
Finish	Article No.
Nickel-plated	372.91.599

Unit: 1 Pair Fitting is visible with float and satin frosted glass, passe-partout or obscure glass may therefore be used.

- > For flaps with 20 mm aluminium
- > M4 x 10 mm fixings included > Material: Zinc alloy





Opening Angle Stop				
Finish	Article No.			
Black	372.91.499			

Unit: 1 Pair

- > For limiting opening angle of 107° to 90°
- > Only applicable for Free Flap 1.7 sets

### **Individual Components**



1: Free Flap 1.7 Lift System				
Model	Article No.			
Model	Left	Right		
Α	372.91.601	372.91.600		
В	372.91.603	372.91.602		
С	372.91.605	372.91.604		
Unit: 1 Piece				

2.14



Free Flap 3.15 Lift System					
Model	Article No.				
Model	Left	Right			
D	372.91.262	372.91.261			
Е	372.91.264	372.91.263			
F	372.91.266	372.91.265			
G	372.91.258	372.91.257			



Front Fixing Brackets					
Fixing	Article No.				
Screw-on	372.56.560				
	Unit: 1 Pair				

Unit: 1 Piece

# Planning


FREE FLAP 1.7 / 3.15


# Free Flap 1.7

# Free Flap 3.15


### **Carcase Drilling Positions**

Free Flap 1.7 Free Flap 3.15

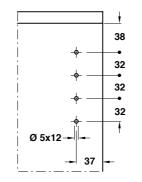

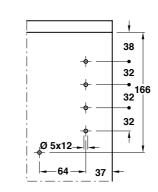


### **Space Requirement**

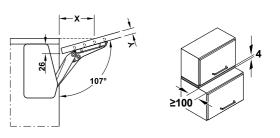


Front panel thickness Y mm	16	19	22	26	28
Distance X mm (with top panel thickness 16 mm)	83	74	64	52	46

### **Front Panel Drilling Positions**

### **Wooden / Wide Aluminium Framed Panel**

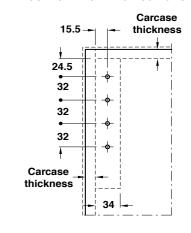

### **Narrow Aluminium Framed Panel**

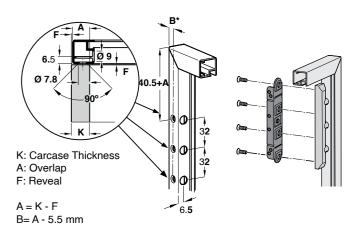

B: 7 mm (minimum), 13.5 mm (maximum)

www.hafeleindia.com www.hafeleindia.com

SCAN ME

SCAN ME



# FREE FLAP 1.7 / 3.15 - PUSH-TO-OPEN ACCESSORIES

### **Push-to-Open Triggers and Housing**









Free flap 1.7 and 3.15 stay flap fitting,

up to a width of max.1,200 mm

> Material:

> Installation: For mounting in drilled hole Ø 10 mm

or sliding into screw-on housing


> Adjustment facility: Front gap +4 mm


> Release distance approx. 2 mm

### Differentiation criteria of the model versions

Colour-coded housing underside for differentiation between models type 1 (green), type 2 (yellow) and type 3 (blue)



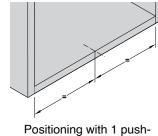



Positioning with 2 pushto-open triggers

### **Push-to-Open Trigger Selection Table**

### Free Flap 1.7

Free Lift Systems

to-open trigger

	Push-to-Open Triggers (Model & Quantity)						
Cabinet height (mm)	Type 1 x 1	Type 2 x 1	Type 3 x 1	Type 2 x 2	Type 3 x 2		
		Front Panel Weight in Kg					
200	1.7 - 3.1	3.1 - 5.4	5.4 - 8.3	8.3 - 12.3	12.3 - 14.7		
225	1.5 - 2.9	2.9 - 4.7	4.7 - 7.1	7.1 - 11.6	11.6 - 13.1		
250	1.3 - 3.1	3.1 - 5.1	5.1 - 6.9	6.9 - 10.5	10.5 - 11.8		
275	1.2 - 3.3	3.0 - 5.0	5.0 - 6.8	6.8 - 10.0	10.0 - 10.6		
300	1.1 - 3.0	2.7 - 4.6	4.6 - 6.6	6.6 - 9.6			
325	1.0 - 3.0	2.6 - 4.2	4.2 - 6.0	6.0 - 8.8			
350	0.9 - 2.9	2.4 - 4.2	3.9 - 5.9	5.9 - 8.1			
375	0.9 - 2.7	2.7 - 3.9	3.9 - 5.7	5.7 - 7.5			
400	0.8 - 2.7	2.7 - 3.8	3.8 - 5.6	5.6 - 7.0			
425	0.7 - 2.3	2.3 - 4.0	4.0 - 5.0	5.0 - 6.5			
450	0.6 - 2.4	2.4 - 3.3	3.3 - 5.1	5.1 - 6.1			

### Free Flap 3.15

	Push-to-Open Triggers (Model & Quantity)					
Cabinet height (mm)	Type 1 x 1	Type 2 x 1	Type 3 x 1	Type 2 x 2	Type 3 x 2	
	Front Panel Weight in Kg					
350		5.2-8.1	6.7–11.8	10.1-18.1	17.9-27.3	
400		4.7–9.0	7.9-12.3	10.7-17.9	17.2-23.3	
450	4.1–5.0	5.0-8.4	7.8-10.9	10.2-16.7	16.7-20.5	
500	3.7–4.9	4.7–7.8	7.0-10.7	10.0-16.0	16.0-18.3	
550	3.3–4.9	4.5–7.5	6.8-10.4	9.7-15.3	15.3-16.5	
600	3.0-4.7	4.2-7.2	6.7-10.2	9.2-15.0		
650	2.6–4.1	3.4–6.4	5.3-10.5	8.4-14.0		



# FREE FLAP 1.7 / 3.15 - PUSH-TO-OPEN ACCESSORIES


### **Ordering Information**



> For mounting in drilled hole Ø 10 x 90	mm
> Material: Plastic with rubber buffer	<b>7</b>

Push-To-Open Triggers					
Model	Colour Code	Ejection Force	Anthracite	Grey	White
Type 1	Green	17 - 23 N	372.91.390	372.91.500	372.91.700
Type 2	Yellow	22 - 34 N	372.91.391	372.91.501	372.91.701
Type 3	Blue	26 - 48 N	372.91.392	372.91.502	372.91.702

Unit: 1 Piece

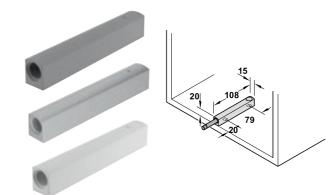

Screw-On Housing		
Colour	Article No.	
Anthracite	372.91.393	
Grey	372.91.503	
White	372.91.703	

Unit: 1 Piece

> Recommended type of screw: Head  $\emptyset$  : 7-9 mm, Thread Ø 3.5–4.5 mm, Screw length >15 mm >Material: Plastic

2.17

2.16 www.hafeleindia.com www.hafeleindia.com Free Lift Systems

### FREE FLAP 1.7 / 3.15 - E-DRIVE

- > Free E-Drive is Häfele's electro-mechanical movement assistance for the entire application area of the Free family
- > The electrical drive solution is perfectly coordinated with all Free Lift Systems
- > Standard programming and operating functions for all Free E applications
- > The installation position and the range of applications of the Free Flap fittings remain unchanged
- > Component installation can be done practically without

- > The E-Drive unit can be retrofitted at any time to the standard mechanical fitting
- > Extremely quiet and smooth running
- > With integrated free-swing function for effortless manual operation of the flap (even in the event of a power failure)
- > Automatic safety stop function interrupts the opening or closing movement if obstacles are detected
- > Parallel connection for up to three drive units, collision avoidance with cross-corner installations and temporary disabling of the drive to clean the flap fronts can also be programmed (optional)



> Area of application: Drive housing: Zinc alloy,

Cover caps: Plastic Fitting: Nickel plated,

> Material:

Cover cap: Grey, white or anthracite <1,200 mm (>1,200 mm = 2 sets) > For flap width:

> Min. cabinet depth: 109 mm (1.7) / 132 mm (3.15) > Input voltage: 100-240 V AC/50-60 Hz/1.3 A

> Nominal voltage: 24 V DC/3.75 A

For interior cabinet lighting: 24 V DC/1.2 A > Output voltage:


> Stand-by power consumption:

> Radio Frequency: 2.4 GHz

> Protection class: II

> Installation: E-Drive unit for screw fixing onto left Free fitting, Push button sender for recess installation in side panel (drill hole Ø 35 mm)

FREE FLAP 1.7/3.15

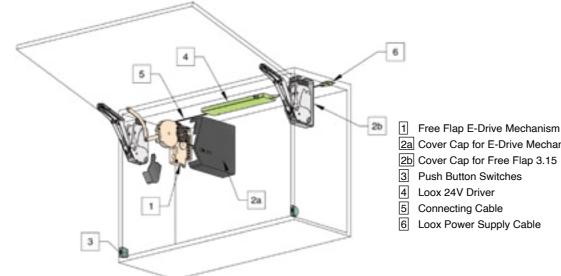

- Free Flap E-Drive Mechanism
- 2a Cover Cap for E-Drive Mechanism
- Push Button Switches
- Loox 24V Driver
- Connecting Cable
- Loox Power Supply Cable

## FREE FLAP 1.7 / 3.15 - E-DRIVE

### **Ordering Information**

### Sets



40		
E-Drive Set For Free Flap 1.7 / 3.15*		
For Models	Article Number	
A - G	372.38.165	
*Consists of: 1 Free Flap 1.7 / 3.15 E-Drive Unit, 1 Loox		

Driver: 90 W- 24V, 1 Loox Power Supply Cable and 1 Connection Cable

E-Drive Free Flap Cover Cap Set*			
Free Flap Systems	Anthracite	Grey	White
1.7 E / 3.15 E	372.38.186	372.38.185	372.38.184

\*Consists of: 1 Cover Cap for E-Drive (left) and1 Cover Cap for Free Flap 3.15 (right)

### **Individual Components**



4/				
Free Flap E-Drive Mechanism Set*				
For Models	Article No.			
A - G	372.91.099			
	E. E.D. M. I			

\*Consists of: Free Flap E-Drive Mechanism, 1 E-Drive Front Fixing Bracket and 2 E-Drive Push Button Switches



LOOX Power Supply Cable			
Type of plug	Length	Article No.	
EU 🚥	2000 mm	833.89.002	

Unit: 1 Piece



E-Drive Push Button		
Finish	Article No.	
Grey	372.91.097	
	Unit: 1 Pair	

> Radio frequency: 2.4 GHz

> Replaceable CR 2032 button cell lithium battery included 7



LOOX 24 V Driver	
Wattage	Article No.
90 W	833.77.949
	11 11 15

Unit: 1 Piece


- > Only 1 E-drive unit can be connected to one driver
- > Colour: Black
- > With overload protection > Degree of Protection: IP 20




Connecting Cable		
Article No.		
850.00.022		

Unit: 1 Piece

### Planning

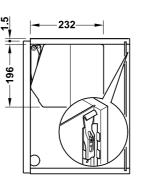


### **Space Requirement**

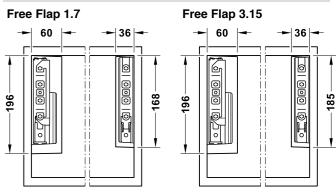



2.18 2.19 www.hafeleindia.com www.hafeleindia.com

# FREE FLAP 1.7 / 3.15 - E-DRIVE

### **Cable Guide and Push Button Switch Installation**







### **Installation and Programming**



> The E-Drive drive unit sits on the lefthand fitting. The lead is simply inserted into the drive unit.



> 24 V interior cabinet lighting from the Loox product range can also be operated using the drive unit.

> The light switches on when the flap is opened.



> The push button sender assigning and the programming of other functions take place via a switching button directly on the drive unit. All programming processes are accompanied and acknowledged by visual and acoustic system feedback.

### Operation

Free Lift Systems



> Opening: The sensor switches, which are usually recessed in the side panels, react to gentle pressure on the flap front.

> They emit a radio signal and the flap moves quietly and automatically to the open position.



> Closing: Pressing the button on the inner surface of the sensor switch sends a radio signal to the drive, which then automatically closes the flap.

> The movement to the closed position takes place quietly and gently.



> The free-swing function integrated in all E-Drive drive units makes effortless manual operation of the flap applications possible.

> The multi-position stop function that is typical of the Free flap fittings ensures that the flap locks securely in any position.







### FREE FOLD



- > For two-piece flaps with division 1:1 made from wood or with aluminium frame
- > High front panels can be lifted up in a space-saving way
- > The handle is reachable at all times
- > Pleasant operating experience even with heavy flaps
- > Stylish and compact design
- > Flap front panel material combinations possible
- > Safety stop
- > Minimum opening resistance, multi-position stop function and integrated soft opening and soft closing mechanisms for ease and
- > For use in combination with standard 110° concealed hinges
- > Adaptable E-Drive for an electrically operated comfort solution
  - > Practical and quick installation

### **Highest Operating Convenience**



- > Minimum opening resistance
- Flap locks in any position (multi-position stop)
- > Smooth, soft closing movement

### **Technical Specifications**

> Material: Fitting: Steel, Cover cap: Plastic

> Finish/colour: Fitting: Galvanised,

Cover cap: Grey, white or anthracite

> Max. cabinet height:1040 mm

> Min. cabinet depth: 288 mm

> Max. cabinet width: 1800 mm ( with 4 lift mechanisms)

> Adjustment facility: Height/ side/ depth of top flap (via concealed hinge)

and lower flap (via connecting hinge)

Weight balancing of panel /centre pull (via lift

mechanism)

> Installation: Fitting: for screw fixing on pre-drilled side panel with

> pre-mounted Euro screws and built-in positioning pins, Front Panel: Tool-free assembly (clip system) onto pre-mounted screw-on brackets of the

mechanism arms


### **Adjustment facility**



Free Lift Systems

Weight balancing adjustment

**Quick Fixing System** 



Centre pull adjustment



Height adjustment ±3 mm





adjustment ± 3 mm




Opening angle adjustment


### **Weight Balancing Adjustment of Fitting**



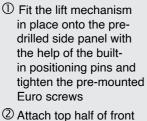

panel, engage arm of fitting in front fixing bracket of lower half of front panel






- > Insert PZ2 screw driver all the way into the opening (as shown above).
- > Set the cordless screwdriver on low-speed torque.
- > Ensure the same weight balancing adjustment is carried out on both sides (left and right).

## **FREE FOLD**

### **Product Specification**

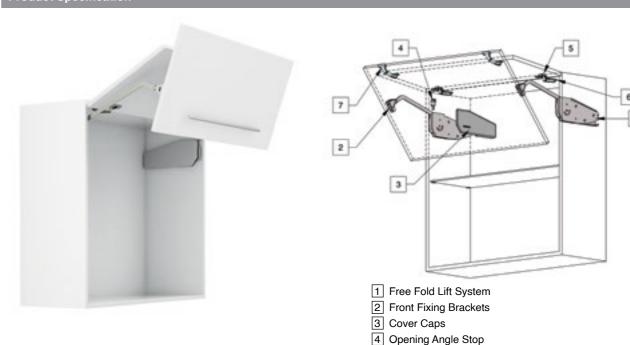

5 Duomatic 110° Concealed Hinge for Top Flap

7 Connecting Hinge

6 Straight Mounting Plate for Duomatic Concealed Hinge

### **Mechanism Selection Table and Ordering Information**

### **Standard Configuration Sets & Components**

Model	Cabinet height (mm)	Flap weight (kg)	Article No.
C3fo	480-530	5.2-11.1	372.38.102
C4fo	480-530	7.8-16.3	372.38.103
C5fo	480-530	12.7-26.5	372.38.101
D3fo	520-590	4.8-10.3	372.38.105
D4fo	520-590	7.2-15.2	372.38.106
D5fo	520-590	11.8-24.5	372.38.104
E3fo	580-650	4.3-9.2	372.38.107
E4fo	580-650	6.5-13.5	372.38.108
F3fo	650-730	3.9-8.3	372.38.109
F4fo	650-730	5.8-12.2	372.38.110
G4fo	710-790	5.3-11.1	372.38.111
G5fo	710-790	8.7-18.0	372.38.112
H4fo	770-840	4.9-10.3	372.38.113
H5fo	770-840	8.0-16.7	372.38.114
l5fo	840-910	7.3-15.3	372.38.115
J5fo	910-970	6.8-14.2	372.38.116
K5fo	960-1010	6.5-13.5	372.38.117
K6fo	960-1010	8.6-17.3	372.38.118
L5fo	1000-1040	6.2-12.9	372.38.100

\*Consist of: Free Fold Lift Mechanism - Left and Right,2 Front Fixing Brackets for Wooden Front Panels or Front Panels with Wide Aluminium Frame (Min. Frame Width: 45 mm), 3 Connecting Hinges, 3 Metalla 510 110° Concealed Hinges, 3 Straight Clip Mounting Plates and Paper Template

2.24 www.hafeleindia.com 2.25 www.hafeleindia.com

### **Ordering Information**

FREE FOLD



Hinge and Adapter Kit for Narrow Aluminium Profile*		
Article No.	372.38.122	
*Consist of: 2 Narrow Aluminium Frame Adapters and 3		

Narrow Aluminium Profile Hinges

Unit: 1 Set



Opening Angle Stop						
Finish	Article No.					
Grey	372.37.060					

Unit: 1 Piece

### **Individual Components**

Free Lift Systems



Free Fold								
Model	Artic	le No.						
Wodei	Left	Right						
L5fo	372.3	37.699						
C5fo	372.38.188	372.38.187						
C3fo	372.3	37.612						
C4fo	372.3	37.613						
D5fo	372.38.194	372.38.193						
D3fo	372.38.190	372.38.189						
D4fo	372.38.192	372.38.191						
E3fo	372.37.831	372.37.830						
E4fo	372.37.833	372.37.832						
F3fo	372.91.607	372.91.606						
F4fo	372.91.609	372.91.608						
G4fo	372.91.611	372.91.610						
G5fo	372.37.853	372.37.852						
H4fo	372.91.613	372.91.612						
H5fo	372.91.615	372.91.614						
l5fo	372.38.196	372.38.195						
J5fo	372.3	37.684						
K5fo	372.3	372.37.694						
K6fo	372.3	372.37.691						

Unit: 1 Piece/ 1 Pair



Cover Caps								
Material Anthracite Grey White								
Plastic	372.38.119	372.38.120	372.38.121					

Unit: 1 Pair

- > Restricts the opening angle to 90° for low level applications
- > Material: Plastic
- > 2 pieces required per flap fitting set





Front Fixing Brackets							
Fixing Article No.							
Screw-on	372.38.200						

Unit: 1 Pair

Unit: 1 Piece

**Straight Mounting Plate** Article No. 329.67.043

> For front panel made from wood or with wide aluminium frame



Metalla 510 - 110° Concealed							
Hinge For Top Flap							
Fixing Article No.							
Screw-on	320 17 600						

Tillige For Top Flap					
Fixing	Article No.				
Screw-on	329.17.600				

> Mounting:

Screw Mounting

	Unit: 1 Piece
> Material:	Steel/ Zamac
> Finish:	Nickel plated
> Adjustment facility:	Side adjustment from -1.5 to +4.5 mm (via Hinge)
	Depth Adjustment from -0.5 mm to 2.8 mm (via
	Mounting Plate)
	Height Adjustment : 2 mm (via Mounting Plate)
> With automatic clos	sing spring

Clip

**FREE FOLD** 

**Ordering Information** 



Narrow Aluminium Frame Adapters							
Finish	Article No.						
Nickel-plated	372.37.044						
N-4-	Unit: 1 Pair						

Fitting is visible with float and satin frosted glass, passe-partout or obscure glass may therefore be used.

- > For flaps with 20 mm aluminium frame
- > Material: Zinc alloy
- > Fixing material supplied



Metalla 510 - Narrow Aluminium Profile Hinge						
Cup fixing Article No.						
For screw fixing	329.48.517					
	11 % 4 B*					

Unit: 1 Piece

> Material: Alloy cup: Zinc, Hinge arm: Steel

> Finish: Nickel plated

> Adjustment facility: Side adjustment from -1.5 to +4.5 mm (via Hinge),

Depth Adjustment from -0.5 mm to 2.8 mm

(via Mounting Plate)

(via Mounting Plate) Height Adjustment : 2 mm

Using Straight mounting plate for screw fixing > Installation: Hinge cup 12.5 mm

> Drilling depth: > Opening angle:

> With automatic closing spring
> To be installed with Straight Mounting Plate (329.67.043)



Connecting Hinge					
Fixing	Article No.				
Screw-on	372.64.796				

Unit: 1 Piece

### > Area of application: For wooden flaps and flaps with aluminium frame, from frame width 20 mm


- > Material: Zinc allov
- > Finish: Nickel plated
- > Adjustment facility: 3-dimensional, side adjustment ±2 mm, gap adjustment -2 to +1 mm, depth adjustment ±1.5 mm
- With finger protection system: The hinge comes apart when

fingers get trapped unintentionally in the gap of the flap.





**Planning and Space Requirement** 

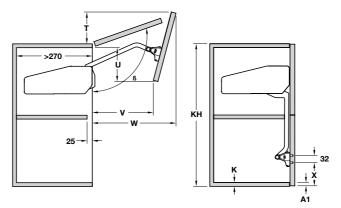


- B: Opening angle
- KH: Cabinet height
- K: Panel thickness
- Space required on top of the cabinet
- W: Space required in front of the cabinet
- X: Drilling distance for screw hole for front fixing brackets from lower edge of front panel

KH	B(°)	Q	R (mm)	S (mm)	T (mm)	U (mm)	V (mm)	W (mm)
480-530	~107-96	1.1	426	328	100-37	100-155	203-186	328-370
520-590	~107-93	1.1	466	347	106-23	112-184	213-190	347-401
580-650	~108-95	1.2	589	377	119-40	126-197	227-207	375-430
650-730	~107-94	1.2	664	409	124-38	147-224	238-215	411-470
710-790	~108-95	1.2	736	439	136-46	161-233	250-219	439-500
770-840	~108-95	1.0	644	467	146-43	179-223	267-200	466-527
840-910	~108-98	1.2	882	501	154-70	195-248	272-231	502-559
910-970	~107-98	1.1	865	533	160-78	214-246	282-225	536-588
960-1010	~107-100	1.1	915	557	170-99	228-251	295-240	560-605
1000-1040	~107-102	1.1	954	576	177-120	239-256	306-256	578-616

2.26 2.27 www.hafeleindia.com www.hafeleindia.com


### FREE FOLD

### **Carcase Drilling Positions**

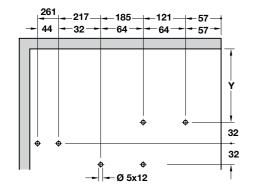


### **Front Panel Drilling Positions**

### **Wooden / Wide Aluminium Framed Panel**

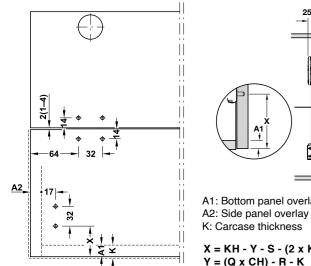


Free Lift Systems

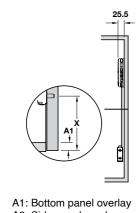



 $X = KH - Y - S - (2 \times K) + A1$  $Y = (Q \times CH) - R - K$ Note: use 3 hinges for flap widths >900 mm

### **Narrow Aluminium Framed Panel**

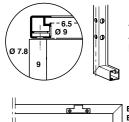


- A1: Bottom panel overlay A2: Side panel overlay
- B: Drilling dimension of narrow aluminium frame adapters

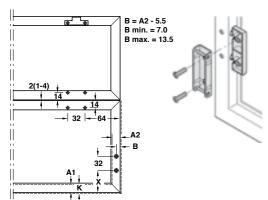

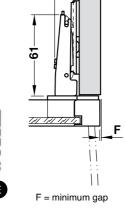


### Metalla 510 - Concealed Hinge & Mounting Plate **Drilling Pattern**



Do	or o	verla	ıy mr	n									
9	10	11	12	13	14	15	16	17	18	19	20	21	
						3	4	5	6				3
Di	Distance to cup E mm Mounting plate distance mm						nm						


### **Connecting Hinge Drilling Pattern & Adjustment**

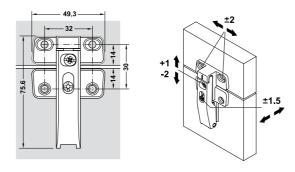

### **Positioning of Opening Angle Stop**



### Metalla 510 - Narrow Aluminium Profile Hinge & Mounting Plate Drilling Pattern

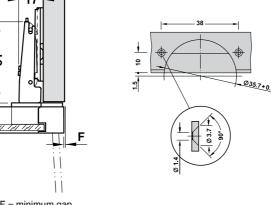

# FREE FOLD - E-DRIVE

- > Free E-Drive is Häfele's electro-mechanical movement assistance for the entire application area of the Free flap fitting family
- > The electrical drive solution is perfectly coordinated with all Free Lift Systems
- > Standard programming and operating functions for all Free E applications
- > The installation position and the range of applications of the Free Fold fittings remain unchanged
- > Component installation can be done practically without

- > The E-Drive unit can be retrofitted at any time to the standard mechanical fitting
- > Extremely quiet and smooth running
- > With integrated free-swing function for effortless manual operation of the flap (even in the event of a power failure)
- > Automatic safety stop function interrupts the opening or closing movement if obstacles are detected
- > Parallel connection for up to three drive units, collision avoidance with cross-corner installations and temporary disabling of the drive to clean the flap fronts can also be programmed (optional)



Drive housing: Zinc alloy, Cover caps: Plastic > Material: > Finish/colour:

Fitting: Nickel plated, Cover cap: Grey, white or anthracite

24 V DC/3.75 A

<1,200 mm (>1,200 mm = 2 sets) > For flap width: 480 -1040 mm

> For cabinet height:

100-240 V AC/50-60 Hz/1.3 A > Input voltage:

> Nominal voltage:

For interior cabinet lighting: 24 V DC/1.2 A > Output voltage: 1 W

> Stand-by power consumption:


> Radio Frequency: 2.4 GHz

> Protection class:

> Installation:

E-Drive unit for screw fixing onto left Free fitting, Push button sender for recess installation in side

panel (drill hole Ø 35 mm)

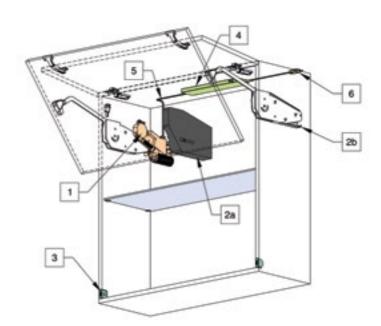

- 1 Free Fold E-Drive Mechanism
- 2a Cover Cap for E-Drive Mechanism
- 2b Cover Cap for Standard Mechanism
- 3 Push Button Switches
- 4 Loox 24V Driver
- Connecting Cable
- Loox Power Supply Cable

2.28 2.29 www.hafeleindia.com www.hafeleindia.com

### FREE FOLD - E-DRIVE

### **Ordering Information**



E-Drive Set For Free Fold*			
For Models	Article No.		
Applicable for all Free Fold models	372.38.164		

\*Consists of: 1 E-Drive Unit, 2 E-Drive Push Button Switches, 1 Loox Driver: 90 W -24V, 1 Loox Power Supply Cable and 1 Connection Cable

Unit: 1 Set



for Standard Fitting (right)





E-Drive Free Fold Cover Cap Set*			
Anthracite	Grey	White	
372.38.168	372.38.167	372.38.166	
*Consists of: 1 Cover Cap for E-Drive (left) and1 Cover Cap			

Unit: 1 Set

### **Individual Components**

Free Lift Systems



Free Fold E-Drive Mechanism Set*			
For Models Article No.			

A-G 372.37.099 \*Consists of: Free Fold E-Drive Mechanism and 2 E-Drive Push Button Switches

Unit: 1 Set



E-Drive Push Button Switches		
Finish Article No.		
Grey	372.91.097	

Unit: 1 Pair

>Radio frequency: 2.4 GHz > Replaceable CR 2032 button cell lithium battery included



LOOX 24 V Driver		
Wattage	Article No.	
90 W	833.77.949	

Unit: 1 Piece

>Only 1 E-Drive unit can be connected to one driver

>Colour: Black

>With overload protection

> Degree of Protection: IP 20




LOOX Power Supply Cable			
Type of plug	Length	Article No.	
EU 💿	2000 mm	833.89.002	


Unit: 1 Piece


Connecting Cable		
Length	Article No.	
1400 mm	850.00.022	

Unit: 1 Piece

### **Planning and Space Requirement**




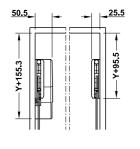





**Cable Guide and Push Button Switch Installation** 



# FREE FOLD - E-DRIVE

### **Installation and Programming**



> The E-Drive drive unit sits on the lefthand fitting. The lead is simply inserted into the drive unit.



- > 24 V interior cabinet lighting from the Loox product range can also be operated using the drive unit.
- > The light switches on when the flap is opened.



> The push button sender assigning and the programming of other functions take place via a switching button directly on the drive unit. All programming processes are accompanied and acknowledged by visual and acoustic system feedback.

### Operation



- > Opening: The sensor switches, which are usually recessed in the side panels, react to gentle pressure on the flap front.
- > They emit a radio signal and the flap moves quietly and automatically to the open position.



- > Closing: Pressing the button on the inner surface of the sensor switch sends a radio signal to the drive, which then automatically closes the flap.
- > The movement to the closed position takes place quietly and gently.



- > The free-swing function integrated in all E-Drive drive units makes effortless manual operation of the flap applications possible.
- > The multi-position stop function that is typical of the Free flap fittings ensures that the flap locks securely in any position.



2.30 2.31 www.hafeleindia.com www.hafeleindia.com



# HAFELE

### FREE SWING




### **Highest Operating Convenience**



- > Minimum opening resistance
- > Flap locks in any position (multi-position stop)
- > Smooth, soft closing movement

### **Quick Fixing System**

Free Lift Systems

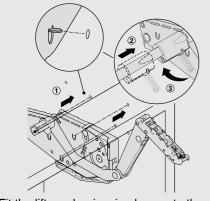

- Fit the lift mechanism in place onto the pre-drilled side panel with the help of the built-in positioning pins and tighten the pre-mounted euro screws
- Insert cross bar and secure it with cross bar
- Fit and engage the front panel onto the Free Swing mechanism arms

- > For one-piece flaps made from wood or with aluminium frame
- > Ideal for large flaps
- > Swivels around cornice profiles and surface mounted liahts
- > Full access to the cabinet contents
- > Stylish and compact design
- > Minimum opening resistance, multi-position stop function and integrated soft opening and soft closing mechanisms for extremely pleasant operating feeling
- > Adaptable E-Drive for an electrically operated comfort solution

### **Technical Specifications**

> Material: Fitting: Plastic, steel,

Cover cap: Plastic

> Finish/colour: Fitting: Nickel plated,

Cover cap: Grey, white or

> Maximum cabinet height: 800 mm

> Minimum cabinet depth: 273 mm

> Maximum cabinet width: 1800 mm (with 4 mechanisms)

> Adjustment facility: Height adjustment ±1.5 mm,

side adjustment ±1.5 mm,

tilting angle ±1.5°,


Weight balancing adjustment

> Installation: Fitting: for screw fixing on pre-

drilled side panel with premounted Euro screws and builtin positioning pins, Front Panel: Tool-free assembly (clip system) onto pre-mounted screw-on

brackets of the mechanism arms

### Weight Balancing Adjustment of Fitting

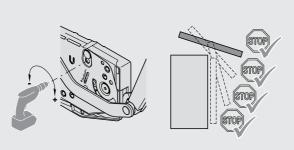

- > Insert PZ2 screwdriver all the way into the opening.
- > Set the cordless screwdriver on low speed torque.
- > Ensure the same weight balancing adjustment is done on both sides (left and right).

### **FREE SWING**

### **Product Specification**



- 1 Free Swing Lift System
- 2 Front Fixing Brackets
- Cover Caps
- Cross Stabilisation Bar
- Cross Bar Connectors

### **Mechanism Selection Table & Ordering Information**

### **Standard Configuration Sets & Components**

Model	Cabinet Height(mm)	Flap Weight(in kg)	Article No.
S1Sw	370-500	1.8-4	372.38.139
S2sw	500-670	2.5-5.9	372.38.142
S3sw	670-800	2.9-6.5	372.38.143
S4sw	370-500	3-6.5	372.38.140
S5sw	500-670	4.5-10	372.38.146
S6sw	670-800	5.3-11.3	372.38.144
S7sw	370-500	4.5-10.3	372.38.141
S8sw	500-670	7-15.9	372.38.147
S9sw	670-800	8-17.1	372.38.145

\*Consist of: Free Swing Lift Mechanism - Left and Right,2 Front Fixing Brackets for Wooden Front Panels or Front Panels with Wide Aluminium Frame (Min. Frame Width: 45 mm), 2 Cross Bar Connectors and Paper Template



Cover Caps			
Material	Anthracite	Grey	White
Plastic	372.38.148	372.38.149	372.38.150

Unit: 1 Pair



Narrow Aluminium Frame Adapters		
Finish Article No.		
Nickel plated 372.91.599		

Unit: Pair

Fitting is visible with float and satin frosted glass, passe-partout or obscure glass may therefore be used.

- > Area of application: For connecting narrow aluminium frames to front fixing brackets
- > For flaps with 20 mm aluminium frame
- > Material: Zinc alloy
- > Fixing material supplied
- > Mounting: For left or right hand use





Cross Bar			
Cabinet Width Length Article No			
600 mm	474 mm	372.38.134	
1200 mm	1074 mm	372.38.138	

Unit: 1 Piece

- > Area of application: For synchronising both fitting parts > Material: Aluminium
- > Finish: Silver coloured anodized
- > Can be cut to size
- > Cutting dimension = internal cabinet width 88 mm

> Side panel thickness W: 16/19 mm



2.34 2.35 www.hafeleindia.com www.hafeleindia.com

# Free Lift Systems

# FREE SWING

### **Ordering Information**

### **Individual Components**



	45			
Model	Cabinet Height (mm)	Flap Weight (kg)	Left	Right
S1sw	370-500	1.8-4	372.3	34.600
S2sw	500-670	2.5-5.9	372.34.610	
S3sw	670-800	2.9-6.5	372.34.620	
S4sw	370-500	3-6.5	372.34.601	
S5sw	500-670	4.5-10	372.38.213	372.38.212
S6sw	670-800	5.3-11.3	372.34.621	
S7sw	370-500	4.5-10.3	372.34.602	
S8sw	500-670	7-15.9	372.38.215	372.38.214
S9sw	670-800	8-17.1	372.34.622	

Unit: 1 Piece / Pair



Front Fixing Brackets	
Fixing	Article No.
Screw-on	372.56.560

Unit: 1 Pair




Cross Bar Connector	
Colour	Article No
Light Grey	372.38.218

Unit: 1 Piece


### Planning and Space Requirement

Free Lift Systems

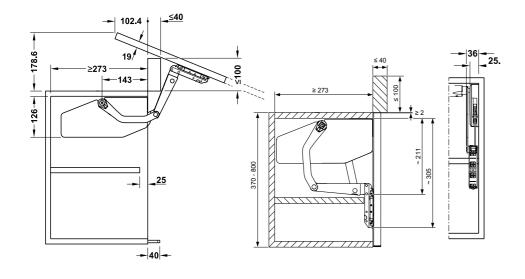


# **FREE SWING**

### **Carcase Drilling Positions**

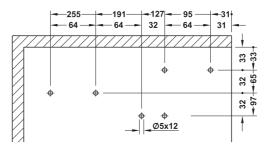


### **Front Panel Drilling Positions**

### **Wooden / Wide Aluminium Framed Panel**




### **Cross Bar Installation**

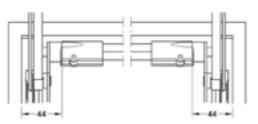



Cutting dimension = internal cabinet width - 88 mm


### **Narrow Aluminium Framed Panel**

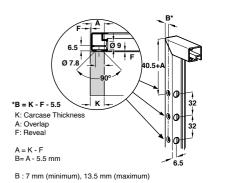

### Installation









2.36

Free Lift Systems

### FREE SWING - E-DRIVE

- > Free E-Drive is Häfele's electro-mechanical movement assistance for the entire application area of the Free flap fitting family
- > The electrical drive solution is perfectly coordinated with all Free Lift Systems
- > Standard programming and operating functions for all Free E applications
- > The installation position and the range of applications of the Free Swing fittings remain unchanged
- > Component installation can be done practically without tools

- > The E-Ddrive unit can be retrofitted at any time to the standard mechanical fitting
- > Extremely quiet and smooth running
- > With integrated free-swing function for effortless manual operation of the flap (even in the event of a power failure)
- > Automatic safety stop function interrupts the opening or closing movement if obstacles are detected
- > Parallel connection for up to three drive units, collision avoidance with cross-corner installations and temporary disabling of the drive to clean the flap fronts can also be programmed (optional)

Fitting: Steel, Cover cap: Plastic,

Cover caps: Grey, white or anthracite

For interior cabinet lighting: 24 V DC/1.2 A

<1,200 mm (>1,200 mm = 2 sets)

100-240 V AC/50-60 Hz/1.3 A

Drive housing: Zinc alloy

Fitting: Nickel plated,

370-800 mm

24 V DC/3.75 A



> Material:

> Finish/colour:

> For cabinet height:

> For flap width:

> Input voltage: > Nominal voltage:

> Output voltage:

> Stand-by power consumption:


> Radio frequency: > Protection class:

> Installation:

1 W

2.4 GHz

E-Drive unit for screw fixing onto left Free fitting, Push button sender for recess installation in side panel (drill hole Ø 35 mm)

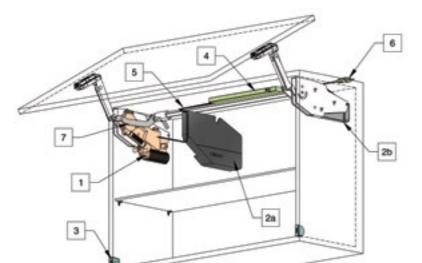

- 1 Free Swing E-Drive Mechanism
- 2a Cover Cap for E-Drive Mechanism
- 2b Cover Cap for Standard Mechanism
- 3 Push Button Switches
- 4 Loox 24V Driver
- Connecting Cable
- 6 Loox Power Supply Cable
- 7 Free Swing E Drive Lever Arm



**Ordering Information** 



-	-
E-Drive Set For Free Swing*	
For Models	Article No.
Applicable for all Free Swing models	372.38.164
*Consists of 4 E Drive Unit 0 E Drive	Duals Dutters

\*Consists of: 1 E-Drive Unit, 2 E-Drive Push Button Switches, 1 Loox Driver: 90 W - 24V, 1 Loox Power Supply Cable and 1 Connection Cable



Free Swing E Drive Cover Cap Set*		
Anthracite	White	Grey
372.38.168	372.38.169	372.38.170
*Consists of: 1 Cover Cap for E-drive (left), 1 Cover Cap for		

Unit: 1 Set

### **Individual Components**



E Drive Free Swing Cover Cap Set*		
Anthracite	White	Grey
372.37.085	372.34.085	372.34.080

\*Consists of: 1 Cover Cap for E-drive (left) and 1 Cover Cap for Standard Fitting (right)



Standard Fitting (right) and 1 E-Drive Lever Arm

Free Swing E Drive Lever Arm	
Article No.	372.34.090
	Unit: 1 Piece



Free Swing E-Drive Mechanism Set*		
For Models Article No.		
All Free Swing models	372.37.099	
*Consists of: Free Swing E-Drive Mechanism and 2 E-Drive Push Button		

Switches

Unit: 1 Set



E-Drive Push Button Switches	
Finish	Article No.
Grey	372.91.097
	Unit: 1 Pa

> Radio frequency: 2.4 GHz > Replaceable CR 2032 button cell lithium battery included



LOOX 24 V Driver	
Wattage	Article No.
90 W	833.77.949
	Linite 4 Dina

> Only 1 E-drive unit can be connected to one driver

> Colour: Black

> With overload protection

> Degree of Protection: IP 20



LOOX Power Supply Cable		
Type of plug	Length	Article No.
EU 🐽	2000 mm	833.89.002
		Unit: 1 Piece

LOOX Power Supply Cable		
ype of plug	Length	Article No.
U 🖜	2000 mm	833.89.002
	•	Linite 4 Diago




Connecting Cable	
Length	Article No.
1400 mm	850.00.022

Unit: 1 Piece

2.38 www.hafeleindia.com www.hafeleindia.com 2.39


### **Planning and Space Requirement**

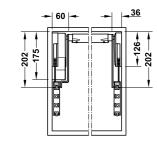

### Cable Guide and Push Button Switch Installation







### **Installation and Programming**



> The E-Drive drive unit sits on the lefthand fitting. The lead is simply inserted into the drive unit.



- > 24 V interior cabinet lighting from the Loox product range can also be operated using the drive unit.
- > The light switches on when the flap is opened.



> The push button sender assigning and the programming of other functions take place via a switching button directly on the drive unit. All programming processes are accompanied and acknowledged by visual and acoustic system feedback.

### Operation

Free Lift Systems



- Opening: The sensor switches, which are usually recessed in the side panels, react to gentle pressure on the flap front.
   They emit a radio signal and the flap
- They emit a radio signal and the flap moves quietly and automatically to the open position.



- > Closing: Pressing the button on the inner surface of the sensor switch sends a radio signal to the drive, which then automatically closes the flap.
- > The movement to the closed position takes place quietly and gently.



- > The free-swing function integrated in all E-Drive drive units makes effortless manual operation of the flap applications possible.
- > The multi-position stop function that is typical of the Free flap fittings ensures that the flap locks securely in any position.







### FREE UP




**Highest Operating Convenience** 



- > Minimum opening resistance
- > Flap locks in any position (multi-position stop)
- > Smooth, soft closing movement

### **Quick Fixing System**

Free Lift Systems

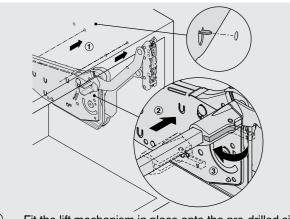

- Fit the lift mechanism in place onto the pre-drilled side panel with the help of the built-in positioning pins and tighten the pre-mounted euro screws
- (2)-(3) Insert cross bar and secure it with the cross bar
- Fit and engage the front panel onto the Free Up mechanism arms

- > For one-piece flaps made from wood or with aluminium frame
- > Can be used in combination with upper-mounted cabinets or front panels
- > Creates practical "niches" in tall cabinets, e.g. for electrical equipment
- > Cabinet contents are extremely easy to access
- > Excellent side stability
- > Minimum opening resistance, multi-position stop function and integrated soft opening and soft closing mechanisms for extremely pleasant operating feeling
- > Adaptable E-Drive for an electrically operated comfort
- > Stylish and compact design

### **Technical Specifications**

> Material: Fitting: Plastic, steel. Cover cap: Plastic Fitting: Nickel plated, > Finish/colour:

Cover cap: Grey, white or anthracite

> Maximum cabinet height: 600 mm > Minimum cabinet depth: 277 mm

> Maximum cabinet width: 1800 mm (with 4 mechanisms) > Adjustment facility: Height adjustment ±1.5 mm, side

adjustment ±1.5 mm, tilting angle

±1.5°, weight balancing adjustment

facility

> Installation: Fitting: for screw fixing on pre-


> drilled side panel with pre-mounted Euro screws and built-in positioning

pins,

Front Panel: Tool-free assembly (clip system) onto pre-mounted screw-on brackets of the

mechanism arms


### Weight Balancing Adjustment of Fitting

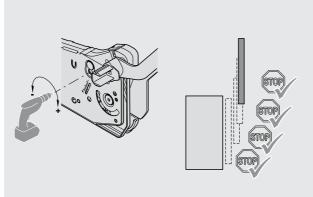

- > Insert PZ2 screwdriver all the way into the opening.
- > Set the cordless screwdriver on low speed torque.
- > Ensure the same weight balancing adjustment is carried out on both sides (left and right).

### FREE UP

### **Product Specification**

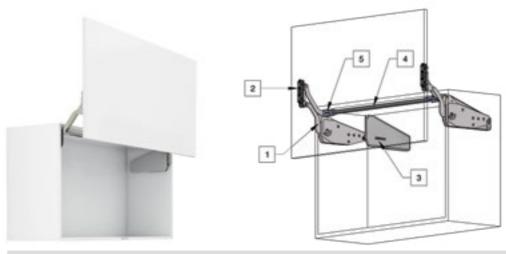

- 1 Free Up Lift System
- 2 Front Fixing Brackets
- 3 Cover Caps
- 4 Cross Stabilisation Bar
- 5 Cross Bar Connectors

### **Mechanism Selection Table & Ordering Information**

### **Standard Configuration Sets & Components**


### Free Up Sets\*

or ob core			
Model	Cabinet Height(mm)	Flap Weight(in kg)	Article No.
P1us	345-420	2.4-4.8	372.38.123
P2us	345-420	4.1-8	372.38.124
P3us	345-420	7.4-14	372.38.127
Q1us	380-500	2.0-3.8	372.38.125
Q2us	380-500	3.4-6.7	372.38.126
Q3us	380-500	6.3-11.8	372.38.128
Q4us	380-500	9.3-17.4	372.38.129
R1us	430-600	1.6-3.3	372.38.130
R2us	430-600	2.6-5.5	372.38.131
R3us	430-600	5.0-9.7	372.38.132
R4us	430-600	7.4-14.6	372.38.133

Consists of: Free Up Lift Mechanism - Left and Right,2 Front Fixing Brackets for Wooden Front Panels or Front Panels with Wide Aluminium Frame (Min. Frame Width: 45 mm), 2 Cross Bar Connectors and Paper Template







Unit: 1 Pair



Cross Bar			
Length	Article No		
474 mm	372.38.134		
1074 mm	372.38.138		
	Length 474 mm		

Unit: 1 Piece

- > Area of application: For synchronising both fitting parts
- > Material: Aluminium
- > Finish: Silver coloured anodized
- > Can be cut to size
- > Cutting dimension = internal cabinet width 88 mm
- > Side panel thickness W: 16/19 mm



Narrow Aluminium Frame Adapters		
Finish	Article No.	
Nickel plated	372.91.599	
Mata	Unit: Pair	

Fitting is visible with float and satin frosted glass, passe-partout or obscure glass may therefore be used.

- > Area of application: For connecting narrow aluminium frames to front fixing brackets
- > For flaps with 20 mm aluminium frame
- > Material: Zinc alloy
- > Fixing material supplied
- > Mounting: For left or right hand use

2.44 2.45 www.hafeleindia.com www.hafeleindia.com

# FREE UP

### **Ordering information**

### **Individual Components**



Model	Cabinet Height(mm)	Flap Weight(in kg)	Left	Right
P1us	345-420	2.4-4.8	372.3	3.610
P2us	345-420	4.1-8	372.3	3.611
P3us	345-420	7.4-14	372.3	3.612
Q1us	380-500	2.0-3.8	372.3	3.620
Q2us	380-500	3.4-6.7	372.3	3.621
Q3us	380-500	6.3-11.8	372.38.202	372.38.201
Q4us	380-500	9.3-17.4	372.38.204	372.38.203
R1us	430-600	1.6-3.3	372.3	3.630
R2us	430-600	2.6-5.5	372.3	3.631
R3us	430-600	5.0-9.7	372.38.206	372.38.205
R4us	430-600	7.4-14.6	372.38.208	372.38.207
			Un	it: 1 Piece / Pair



Front Fixing Brackets	
Fixing	Article No.
Screw-on	372.56.560

Unit: 1 Pair




Cross Bar Connector		
Colo	ur	Article No
Light	Grey	372.38.218

### Unit: 1 Piece

### Planning and Space Requirement


Free Lift Systems

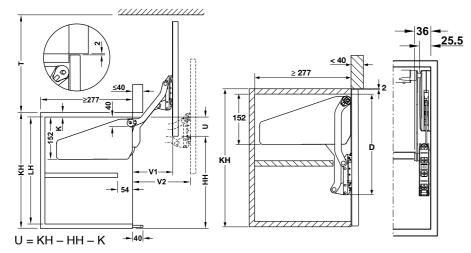

Cabinet height KH mm	D	LH mm	HH mm	T mm	V1 mm	V2 mm
320–360	274.5	>280	278	>281	128	177
345–420	302.5	>308	328	>333	146	205
380–500	337.5	>343	390	>393	168	240
430–600	382.5	>388	470	>473	196	284


# FREE UP

### **Carcase Drilling Positions**

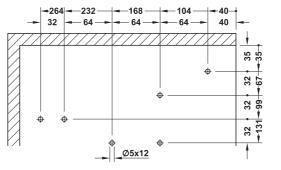


# Front Panel Drilling Positions

### **Wooden / Wide Aluminium Framed Panel**

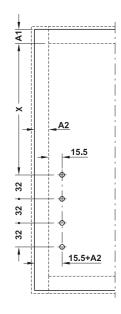


### **Cross Bar Installation**

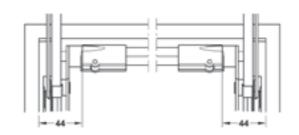



Cutting dimension = internal cabinet width - 88 mm

### Narrow Aluminium Framed Panel

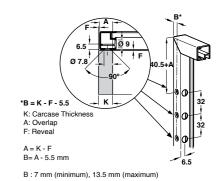

Installation



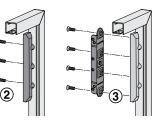



2.46 www.hafeleindia.com www.hafeleindia.com 2.47

Free Lift Systems

### FREE UP - E-DRIVE

- > Free E-Drive is Häfele's electro-mechanical movement assistance for the entire application area of the Free flap fitting family
- > The electrical drive solution is perfectly coordinated with all Free Lift Systems
- > Standard programming and operating functions for all Free E applications
- > The installation position and the range of applications of the Free Up fittings remain unchanged
- > Component installation can be done practically without tools

- > The E-Drive unit can be retrofitted at any time to the standard mechanical fitting
- > Extremely quiet and smooth running
- > With integrated free-swing function for effortless manual operation of the flap (even in the event of a power failure)
- > Automatic safety stop function interrupts the opening or closing movement if obstacles are detected
- > Parallel connection for up to three drive units, collision avoidance with cross-corner installations and temporary disabling of the drive to clean the flap fronts can also be programmed (optional)



> Material:

> Finish/colour:

> For cabinet height:

> For flap width:

> Input voltage:

> Nominal voltage: > Output voltage:

> Stand-by power consumption:

> Radio frequency:

> Protection class:

> Installation:

Fitting: Steel, Cover cap: Plastic, Drive housing: Zinc alloy Fitting: Nickel plated,

Cover caps: Grey, white or anthracite 345-600 mm

<1,200 mm (>1,200 mm = 2 sets)

100-240 V AC/50-60 Hz/1.3 A


24 V DC/3.75 A

For interior cabinet lighting: 24 V DC/1.2 A

1 W

2.4 GHz

E-Drive unit for screw fixing onto left Free fitting, Push button sender for recess installation in side panel (drill hole Ø 35 mm)

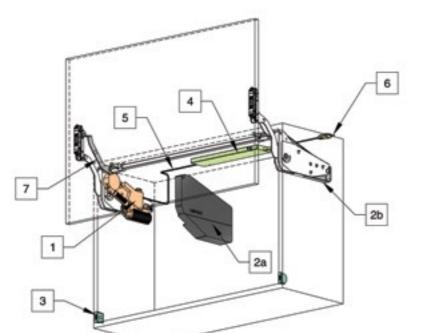

- 1 Free Swing E-Drive Mechanism
- 2a Cover Cap for E-Drive Mechanism
- 2b Cover Cap for Standard Mechanism
- 3 Push Button Switches
- 4 Loox 24V Driver
- Connecting Cable
- Loox Power Supply Cable
- 7 Free Swing E Drive Lever Arm



## FREE UP - E-DRIVE

### **Ordering Information**



E-Drive Set For Free Up*		
For Models	Article No.	
Applicable for all Free Up models	372.38.164	

\*Consists of: 1 E-Drive Unit, 2 E-Drive Push Button Switches, 1 Loox Driver: 90 W - 24V, 1 Loox Power Supply Cable and 1 Connection Cable



Free Up E Drive Cover Cap Set*			
Model	Anthracite	White	Grey
Р	372.38.177	372.38.175	372.38.176
Q	372.38.180	372.38.178	372.38.179
R	372.38.183	372.38.181	372.38.182

\*Consists of: 1 Cover Cap for E-Drive (left), 1 Cover Cap for Standard Fitting (right) and 1 E-Drive Lever Arm

E-Drive Free Up Lever Arm

For cabinet height

mm

345-420

380-500

430-600

### **Individual Components**



Switches





E-Drive Free Up Cover Cap Set*			
Anthracite	White	Grey	
372.37.090	372.33.085	372.33.080	
*Consists of: 1 Cover Cap for E-drive (left) and 1 Cover Cap for Standard Fitting (right)			





Free Up E-Drive Mechanism		
For Models	Article No.	
A - G	372.37.099	
*Consists of: Free Up E-Drive Mechanism and 2 E-Drive Push Button		

Unit: 1 Set



E-DRIVE Push Button Switches	
Finish	Article No.
Grey	372.91.097

Unit: 1 Pair

Model

Q

> Radio frequency: 2.4 GHz

> Replaceable CR 2032 button cell lithium battery included



Article No.

372.33.091

372.33.092

372.33.093

LOOX 24 V Driver		
Wattage	Article No.	
90 W	833.77.949	

Unit: 1 Piece

Unit: 1 Piece

- >Only 1 E-Drive unit can be connected to one driver
- > Colour: Black
- > With overload protection > Degree of Protection: IP 20



LOOX Power Supply Cable			
Type of plug	Length	Article No.	Length
EU 🖜	2000 mm	833.89.002	1400 mm

Unit: 1 Piece


Connecting Cable			
ength	Article No.		
400 mm	850.00.022		

Unit: 1 Piece


2.48 2.49 www.hafeleindia.com www.hafeleindia.com

### **Planning and Space Requirement**

# ≥277

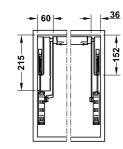

### **Cable Guide and Push Button Switch Installation**

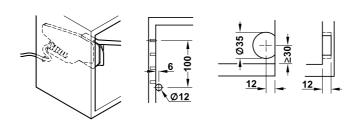

### **Installation and Programming**



> The E-Drive drive unit sits on the lefthand fitting. The lead is simply inserted into the drive unit.



> 24 V interior cabinet lighting from the Loox product range can also be operated using the drive unit.

> The light switches on when the flap is opened.



> The push button sender assigning and the programming of other functions take place via a switching button directly on the drive unit. All programming processes are accompanied and acknowledged by visual and acoustic system feedback.

# Operation

Free Lift Systems



> Opening: The sensor switches, which are usually recessed in the side panels, react to gentle pressure on the flap front.

> They emit a radio signal and the flap moves quietly and automatically to the open position.



> Closing: Pressing the button on the inner surface of the sensor switch sends a radio signal to the drive, which then automatically closes the flap.

> The movement to the closed position takes place quietly and gently.



> The free-swing function integrated in all E-Drive drive units makes effortless manual operation of the flap applications possible.

> The multi-position stop function that is typical of the Free flap fittings ensures that the flap locks securely in any position.

www.hafeleindia.com









### **Mumbai Design Centre:**

Haji Moosa Patrawala Ind.(SOBO) Estate, Near Famous Studio, Mahalaxmi (West), Mumbai - 400 011 Tel.: 022 6264 7100.

### **Mumbai Design Centre:**

#2 Filix Building, Opp. Asian Paints, L.B.S. Marg, Bhandup (West), Mumbai - 400 078 Tel.: 022 2596 9660/ 2596 9787/2594 7305

### **New Delhi Office & Design Centre:**

D-89, 1st Floor, Okhla Phase-I, New Delhi - 110 020 Tel.: 011-66574999 Fax: 011-41605482

### **Bangalore Office & Design Centre:**

Incubex Nestavera Spaces Pvt Ltd, No:13, Langford Place, Langford Road, Shanti Nagar, Bangalore - 560 025 Tel.: 080 4132 6116

Fax: 080 4132 6226

### Bangalore Hafele Appliances Gallery:

No. 2/1, Shiv Manor, Langford Road, Shantinagar, Bangalore - 560027

Tel.: 080 - 4142 6336

### **Hyderabad Office & Design Centre:**

SJR Building - # 1-57/89/1 & 1-57/89/2 Opp Allahabad Bank, Gachibowli, Hyderabad – 500032 Tel.: 040 29557578 / 040 29557588

### **Kolkata Design Centre:**

PS PACE, Premises No. 1/1A, Mahendra Roy Lane, Topsia, Kolkata - 700 046

Tel.: 033 40086814 / 033 40089268

Fax: 033 24988020

### **Kolkata Office:**

Office No. 1001, PS Continental, 10th Floor, 83/2/1 Topsia Road, Near Vishwakarma Building. South Kolkata - 700046 Tel: 033-2285 0104 / 033-2285 0105 / 033-2285 0106

### Chennai Office & Design Centre:

1st Floor No.24, College Road, Nungambakkam, Chennai - 600 006

Tel.: 044 - 4215 1542 Fax: 044 2446 0922

### **Pune Design Centre:**

Showroom No. 2, Ground Floor, F P no. 403, A/2, ICC Trade Tower, Senapati Bapat Marg, Shivaji Nagar, Pune -411016 Tel.: 020 2563 3301 Fax: 020 2563 3302

### **Pune Office:**

Office No. 12, Vastushree Complex, Survey No.587, Near Hyde Park, Gultekdi, Market Yard, Pune - 411 037 Tel.: 020 2426 6264 Fax: 020 2426 6274

### **Ahmedabad Office:**

Hafele India Pvt. Ltd., Office No. 302, 3<sup>rd</sup> Floor, Shangrila Arcade, Near Shyamal Cross Road, Satellite, Ahmedabad - 380015

Tel.: +91 79695 55505 / 8866220505

### **Cochin Office:**

Jomer Symphony, 5th Floor, 48/1744 C34, Chalikkavattom, North Ponnurunni, Vyttila, Cochin- 682010

### Sri Lanka:

### **Hafele Office and Design Centre:**

52, Nandana Gardens (On Duplication Road), Colombo 04. Tel: +94 112 500 501. Fax: 0094 112 500 553.

### **Hafele Design Centre:**

448, Galle Road, Rawathawatta, Moratuwa, Sri Lanka. Tel.: +94 112 644 600.

### **Hafele Boutique:**

747A, Sirimawo Bandaranayaka Mawatha, Mulgampola, Kandy, Sri Lanka. Tel.: +94 812 223 338.

### **Bangladesh Office:**

2<sup>nd</sup> Floor, House - 181, Road - 2, Mohakhali DOHS, Dhaka - 1206. Tel.: 01844018431/ 01844018432/ 01844018433/ 01844018437.

### **Bangladesh Design Center:**

House - 106, Road - 12, Block - E, Banani, Dhaka - 1213 Tel.: 02-48810380-81

### Nepal:

UHS Holdings Pvt. Ltd. Kathmandu-2, Gairidhara Chowk, Nepal.

Mob.: +977 9802338800

### Bhutan:

SMART HOMES

Gr. Floor, Druk Building (Opp Helipad) Babesa -Thimpu Expressway, Thimpu

Tel.: +975-2-333419

Mob.: +975-77277615, 17839717, 77114228,1760063,17669840



Mumbai Corporate Office: Office No. 3, Building "A", BETA, I Think Techno Campus, Off J.V.L.R, Opp. Kanjurmarg East, Mumbai – 400 042. Tel.: 022 6142 6100 | Fax: 022 6702 0531.

For Enquiries SMS "HAFELE" to 56070 Toll Free Customer Care: 1800 266 6667 Customer Care WhatsApp: +91 97691 11122 customercare@hafeleindia.com info@hafeleindia.com











